

Installation Instructions

Thru-Hull Transducers

Models 408P, 408B, AT408B and AT408P

IMPORTANT – PLEASE READ THESE INSTRUCTIONS COMPLETELY BEFORE PROCEEDING WITH THE INSTALLATION OF THE THRU-HULL TRANSDUCER.

WARNING: NEVER USE SOLVENTS!

Cleaners, gasoline, paint, sealant and other products may contain strong solvents, which can attack many plastics dramatically reducing their strength.

APPLICATION CONSIDERATIONS:

- Plastic housings are recommended for fiberglass or metal hulls. Never install a plastic Thru-Hull housing into a wooden boat hull. The swelling of the wood may overstress the plastic housing causing a fracture to occur.
- Bronze housings are recommended for wood or fiberglass hulls. Never install a bronze housing in a metal hull, because electrolytic corrosion can occur.
- Stainless steel housings are recommended for metal hulls to prevent electrolytic corrosion from occurring.
- Never install a metal housing in a hull with a positive ground.

MOUNTING LOCATION

The transducer must be positioned in the hull at a location that assures a smooth, bubble-free flow of water across the transducer face (especially at high speeds). Under no circumstances should it be located directly aft of any hull fitting or other protrusion on the hull.

The best location is aft of amidships and as close to the keel or centerline of the boat as possible. On sailboats, placement too close to the keel should be avoided because of the “shading” of the sound beam. Forward of the keel is usually a good position.

Acoustic noise is another item to take into consideration when determining a location of the transducer. Vessel generated noise from the propellers, shafts and other machinery should be avoided also.

After determining the best location from the outside, consider the need for room inside the hull to tighten the mounting nuts and sufficient headroom to allow for removal of the insert module. A minimum of 6”, above the top of the insert module, will be needed for safe removal of the insert.

FAIRING BLOCK

Unless the transducer can be installed in a fairly flat area on the hull (dead rise angle should not exceed 10°), a fairing/leveling block must be used to assure that the sonar beam is projected downward. A fairing block cut to the shape of the transducer but ½” wider, must be sawed at an angle to match the dead rise. See Figure 1. A prefabricated fairing block is available from your dealer.

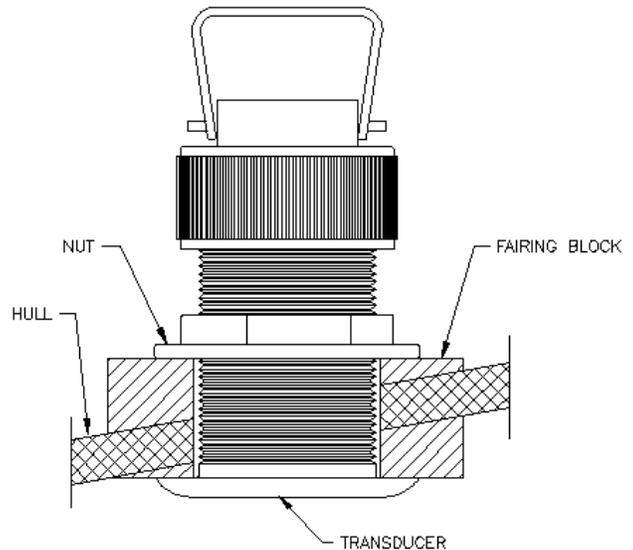


Figure 1. Fairing block mounting detail.

INSTALLATION

WARNING: Always wear the proper safety goggles, dust mask and clothing during the installation procedure.

Note: For a cored fiberglass hull, thru hull transducer installation should only be performed by a trained technician. Improper sealing of the core material can lead to premature failure or possible water leakage.

Once a location has been determined, and prior to drilling any holes in the hull. Inspect the location from the inside of the hole to ensure that the location you have chosen will not interfere with any bulkheads, plumbing or any other obstruction.

1. Drill a small hole first from the inside of the hull at the desired location for the transducer. This will be a locating hole for the final drilling.
2. From the outside, enlarge the locating hole to ¼” or whatever size necessary for the pilot drill of the 2” hole saw. Drill the pilot hole vertically, followed by the hole saw.
3. After drilling, remove any rough edges around the hole and thoroughly clean and sand the inside and outside surfaces around the hole.

Installation Instructions

Thru-Hull Depth Transducers

Models 408P, 408B, 408ST, AT408B and AT408P

- Remove the hull nut from the transducer housing.
Retractable models – Also remove the cap nut and the transducer insert.
- Apply a generous amount, approximately 1/16" thick, of a good marine adhesive/sealing compound around the lip of the housing that contacts the hull. The compound should also extend up the sidewall of the housing, 1/4" higher than the combined thickness of the hull and hull nut. This will ensure there is sealant in the threads to seal the hull and to hold the hull nut securely in place.
- From the outside of the hull, insert the transducer housing and gently rotate the housing to squeeze out and excess sealant.
- From the inside, thread down the hull nut until it makes contact with either the hull or fairing block, if used. The hull nut should then be tightened to a snug fit using slip joint pliers. See Figure 2.

CAUTION: DO NOT OVERTIGHTEN HULL NUT.

- Remove any excess sealant on the outside of the hull to ensure there is smooth water flow over the face of the transducer.

COMPLETION (Retractable Models Only)

Apply silicone grease or petroleum jelly to the inside of the housing and to the o-rings on the insert module. With a twisting motion, push the insert into the housing until the insert cap nut makes contact with the housing. Screw the cap nut down in place and hand tighten only. Make sure the outer housing does not rotate and disturb the sealant during the installation of the insert.

WARNING: Attach the safety wire/chain to prevent the insert from backing out in the event the cap nut fails or is installed incorrectly.

SAFETY WIRE/CHAIN.

Plastic housing – Slip one end of the supplied safety chain into the slot located on the hull wing nut. Thread the opposite end of the chain through the Pull Ring so that the chain lies within the notch of the insert. Pull the chain tight and secure to the opposite slot in the hull wing nut

Bonze housing – For models supplied in a metal housing, wrap one end of the safety wire around the housing and twist it together. Thread the other end through the Pull Ring and pull tight so that the safety wire lies within the notch of the insert. Wrap the loose end around the housing

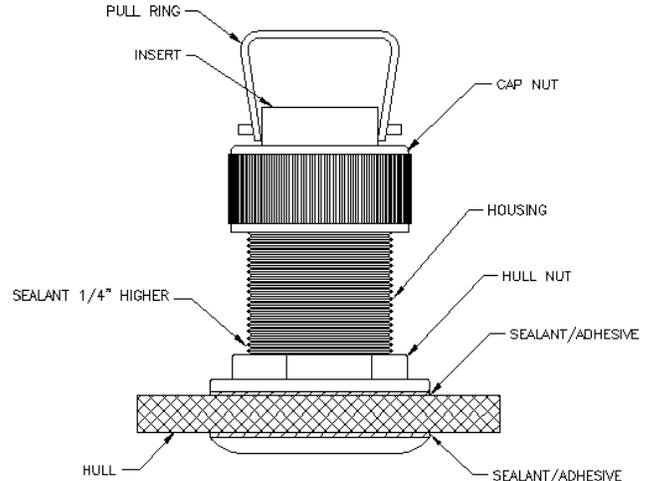


Figure 2. (Retractable model shown)

and twist it together securely.

CABLE ROUTING

In routing the cable to the sounder, avoid placing it near or parallel to other electrical cables, particularly ignition and alternator wiring. Use care when routing the cable through bulkheads and other parts of the vessel to avoid tearing the cable jacket thus exposing it to the harsh environment.

CHECKING FOR LEAKS

CAUTION: Never install a thru-hull transducer and leave the boat in the water unattended for several days.

After installation of the thru-hull transducer, and the proper time allotment for the adhesive to setup correctly, place the vessel in the water and immediately check around the thru-hull transducer for leaks. Small leaks by not be immediately visible. It is best not to leave the vessel in the water for more than 3 hours before checking it again for leaks. If a leak is observed, repeat the "Installation" procedure with extra care taken during steps 5 thru 8.

CARE AND MAINTENANCE

To avoid marine growth, particularly in a warm salt water environment, it is good practice to remove the insert module (Retractable only) if the boat is to remain inactive for any prolonged period. To do this, first have the blanking plug with O-rings installed and lubricated ready for insertion as the insert module is retracted.

If on removal of the insert module, any evidence of marine growth or fouling is evident, it should be removed before re-installation. Anti fouling paint may be applied to surfaces exposed to salt water. DO NOT paint any o-ring or o-ring grooves.